

## Starting the KRL Script

Start the Orocos scripts on the robot controller. Do not do this alone if you use the robot for the first time. Contact the responsible person listed [here](#).

## Running the server side software

This is now the time to start the IISOrocos server side software. The software is run by starting roscore and running an instance of IISOrocos for each arm:

```
$IIS_INCLUDE_PATH/iis_scripts/both_arms.sh
```

If you are only running one arm, you can also run this one separately by using

```
$IIS_INCLUDE_PATH/iis_scripts/left_arm.sh
```

or

```
$IIS_INCLUDE_PATH/iis_scripts/right_arm.sh
```

respectively (depending on the script you are running on the KUKA controller side).

## Arm Control Topics

The topic names have the following structure (according to the lab internal convention orocos topic names have been changed compared to older versions):

```
$execution_type$/$hardware$/$control_type$/$control_topic$
```

```
execution_type = {simulation, real}  
hardware = {right_arm, left_arm, right_sdh, left_sdh, kinect1, kinect2}  
control_type = {joint_control, cartesian_control, settings, sensing}
```

## Message Types

todo

## Readable Topics

### settings/get\_speed

Returns the current speed for ptp movements (see joint\_control/ptp) as a number between 0 (no movement) and 1 (maximum speed)

Message type:

```
std_msgs/Float64
```

Sample call:

```
rostopic echo /real/right_arm/settings/get_speed
```

Sample output:

```
data: 0.5
```

### **settings/get\_command\_state**

Returns the current command state. The output is a 2-dim array, where the first number indicates if the arm is in command mode and the second number contains the exact command mode number.

Message type:

```
std_msgs/Float32MultiArray
```

Sample call:

```
rostopic echo /real/right_arm/settings/get_command_state
```

Sample output:

```
layout:  
  dim: []  
  data_offset: 0  
data: [1.0, 10.0]
```

### **sensing/temperature**

Returns the temperature in each robot joint as array.

Message type:

```
std_msgs/Float32MultiArray
```

Sample call:

```
rostopic echo /real/right_arm/sensing/temperature
```

Sample output:

```
layout:
```

```
dim: []
data_offset: 0
data: [42.400001525878906, 46.20000076293945, 45.900001525878906,
46.70000076293945, 45.900001525878906, 62.400001525878906,
61.20000076293945]
```

## sensing/state

Returns the current state of the robot as array. It contains 4 numbers:

- m\_msr\_data.robot.power
- m\_msr\_data.robot.control
- m\_msr\_data.robot.error
- m\_msr\_data.robot.warning

Message type:

```
std_msgs/Int32MultiArray
```

Sample call:

```
rostopic echo /real/right_arm/sensing/state
```

Sample output:

```
layout:
  dim: []
  data_offset: 0
data: [0, 1, 0, 0]
```

## sensing/jacobian

Returns the Jacobian in the current robot position.

Message type:

```
std_msgs/Float64MultiArray
```

Sample call:

```
rostopic echo /real/right_arm/sensing/jacobian
```

Sample output:

```
layout:
  dim: []
  data_offset: 0
data: [0.11856745183467865, 0.8065090179443359, 0.18409588932991028,
```

```
0.1728156954050064, -0.049717362970113754, -0.019414713606238365, 0.0,
0.6405692100524902, -0.00604418246075511, 0.08719471842050552,
-0.3324144184589386, -0.012777105905115604, 0.07554514706134796, 0.0,
0.25680267810821533, -0.04223119094967842, 0.026677558198571205,
-0.25205785036087036, 0.0, 0.0, 0.0, -0.808161735534668,
0.016004111617803574, -0.06539558619260788, 0.9157959818840027,
0.16380904614925385, -0.9685274958610535, -0.0, -0.0841047391295433,
0.9862498044967651, -0.16312111914157867, 0.38198092579841614,
-0.6374020576477051, -0.24890658259391785, 0.0, 0.5829245448112488,
0.16448475420475006, 0.9844363331794739, 0.12413008511066437,
0.7529177665710449, -0.0, 1.0]
```

## sensing/msr\_jnt\_trq

Returns the current measured total torques on each joint (7-dim float array).

Message type:

```
std_msgs/Float64MultiArray
```

Sample call:

```
rostopic echo /real/right_arm/sensing/msr_jnt_trq
```

Sample output:

```
layout:
  dim: []
  data_offset: 0
data: [24.940000534057617, 33.150001525878906, 7.269999980926514,
-4.840000152587891, -0.18000000715255737, 1.159999966621399,
-0.46000000834465027]
```

## sensing/est\_ext\_jnt\_trq

Returns the current torques applied on each joint (7-dim float array) excluding the torques generated by the rest of the arm itself. These values are estimated by the KUKA controller.

Message type:

```
std_msgs/Float64MultiArray
```

Sample call:

```
rostopic echo /real/right_arm/sensing/est_ext_jnt_trq
```

Sample output:

```
layout:  
  dim: []  
  data_offset: 0  
data: [0.4312626123428345, 0.05431468039751053, 0.6109476685523987,  
-0.3116573691368103, -0.22619108855724335, 0.9795454144477844,  
-0.44677433371543884]
```

### sensing/error

Returns an error if one has been observed during the loop cycle. The message consists of an error code and an error message.

Message type:

```
iis_orocos/OrocosError
```

Sample call:

```
rostopic echo /real/right_arm/sensing/error
```

Sample output:

```
TODO
```

### sensing/cartesian\_wrench

Returns the current cartesian forces and torques at the end effector

Message type:

```
geometry_msgs/Wrench
```

Sample call:

```
rostopic echo /real/right_arm/sensing/cartesian_wrench
```

Sample output:

```
force:  
  x: 2.77582025528  
  y: -0.254617959261  
  z: -3.10084724426  
torque:  
  x: 0.430095881224  
  y: 0.816247463226  
  z: 0.547478497028
```

## joint\_control/ptp\_reached

Returns the state of the current ptp movement (see joint\_control/ptp). It returns an array with the first element being 1 when the final position is reached and 0 otherwise.

Message type:

```
std_msgs/Int32MultiArray
```

Sample call:

```
rostopic echo /real/right_arm/joint_control/ptp_reached
```

Sample output:

```
TODO
```

## joint\_control/get\_state

Returns the current joint positions of the arm

Message type:

```
sensor_msgs/JointState
```

Sample call:

```
rostopic echo /real/right_arm/joint_control/get_state
```

Sample output:

```
header:  
  seq: 26774  
  stamp:  
    secs: 0  
    nsecs: 0  
  frame_id: dummy_frame_id  
name: ['arm_0_joint', 'arm_1_joint', 'arm_2_joint', 'arm_3_joint',  
'arm_4_joint', 'arm_5_joint', 'arm_6_joint']  
position: [-0.025538215413689613, 0.8757621049880981, 1.995240569114685,  
0.5836411118507385, -0.18975336849689484, 0.7183101773262024,  
1.3192434310913086]  
velocity: [0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0] <-- not working currently  
effort: [0.24101980030536652, 0.2610560357570648, 0.6392512917518616,  
-0.3438339829444885, -0.23192289471626282, 1.0096474885940552,  
-0.44344362616539]
```

## joint\_control/get\_impedance

Returns joint impedance values

Message type:

```
iis_orocos/FriJointImpedance
```

Sample call:

```
rostopic echo /real/right_arm/cartesian_control/get_impedance
```

Sample output:

```
stiffness: [250.0, 250.0, 250.0, 250.0, 250.0, 250.0, 250.0]  
damping: [0.699999988079071, 0.699999988079071, 0.699999988079071,  
0.699999988079071, 0.699999988079071, 0.699999988079071, 0.699999988079071]
```

## cartesian\_control/get\_impedance

Returns Cartesian impedance values

Message type:

```
iis_orocos/CartesianImpedance
```

Sample call:

```
rostopic echo /real/right_arm/cartesian_control/get_impedance
```

Sample output:

```
stiffness:  
  linear:  
    x: 1000.0  
    y: 1000.0  
    z: 1000.0  
  angular:  
    x: 100.0  
    y: 100.0  
    z: 100.0  
damping:  
  linear:  
    x: 0.3  
    y: 0.3  
    z: 0.3  
  angular:  
    x: 0.3  
    y: 0.3
```

```
z: 0.3  
cpmaxdelta: 0.0  
maxforce: 0.0  
axismaxdeltatrq: 0.0
```

### **cartesian\_control/get\_pose**

Returns cartesian pose of the arm

Message type:

```
geometry_msgs/Pose
```

Sample call:

```
rostopic echo /real/right_arm/cartesian_control/get_pose
```

Sample output:

```
position:  
x: -0.671013116837  
y: 0.200215816498  
z: 0.752071797848  
orientation:  
x: 0.452136724939  
y: 0.0641745917401  
z: -0.889025856601  
w: 0.0331853931426
```

### **cartesian\_control/get\_velocity\_limit**

Returns Cartesian velocity limit (see cartesian\_control/set\_velocity\_limit)

Message type:

```
std_msgs/Float32
```

Sample call:

```
rostopic echo /real/right_arm/cartesian_control/get_velocity_limit
```

Sample output:

```
data: 0.0
```

## joint\_control/get\_velocity\_limit

Returns joint velocity limit (see joint\_control/set\_velocity\_limit)

Message type:

```
std_msgs/Float32
```

Sample call:

```
rostopic echo /real/right_arm/joint_control/get_velocity_limit
```

Sample output:

```
data: 0.10000000149
```

## Writable Topics

### settings/switch\_mode

Allows to set the current command mode of the arm according to the following modes:

- 10 Position Controller
- 20 Cartesian Stiffness Controller (be careful in mode 20 - calibration seems to be not complete for right arm - drifting observed)
- 30 Axis-specific Stiffness Controller
- 101 Gravity Compensation

Sample call:

```
rostopic pub /real/right_arm/settings/switch_mode std_msgs/Int32 10
```

### settings/set\_speed

Sets the current speed for ptp movements (see joint\_control/ptp) as a number between 0 (no movement) and 1 (maximum speed).

Message type:

```
std_msgs/Float64
```

Sample call:

```
rostopic pub /real/right_arm/settings/set_speed std_msgs/Float64 0.4
```

## joint\_control/set\_impedance

Sets joint impedance values (stiffness, damping)

Message type:

```
iis_orocos/FriJointImpedance
```

Sample call:

```
rostopic pub /real/right_arm/joint_control/set_impedance
iis_orocos/FriJointImpedance "stiffness: [250.0, 250.0, 250.0, 250.0, 250.0,
250.0, 250.0]
damping: [0.699999988079071, 0.699999988079071, 0.699999988079071,
0.699999988079071, 0.699999988079071, 0.699999988079071]"
```

## joint\_control/ptp

Movement in joint space for point to point movement. The robot has to be in an appropriate control mode before using this topic (otherwise it will not move) (see settings/switch\_mode).

Message type:

```
std_msgs/Float64MultiArray
```

Sample call:

```
rostopic pub /real/right_arm/joint_control/ptp std_msgs/Float64MuiArray
"layout:
  dim:
    - label: 'RAD'
      size: 7
      stride: 0
      data_offset: 0
  data: [-0.15538215413689613, 0.8757621049880981, 1.995240569114685,
0.5836411118507385, -0.18975336849689484, 0.7183101773262024,
1.3192434310913086]"
```

## joint\_control/move

Trajectory movement in joint space. The trajectory has to be provided in small pieces. This must *\*not\** be used for ptp movement as it can yield high accelerations. It accepts the angles in which the arm joints should be after the next cycle (one cycle has a duration between 1 and 20 ms)

Message type:

```
std_msgs/Float64MultiArray
```

Sample call:

```
The following is not recommend to use outside of a program providing proper trajectories, as it can yield high accelerations when used wrongly  
TODO
```

### **cartesian\_control/move**

Trajectory movement in Cartesian space. The trajectory has to be provided in small pieces. This must *not* be used for ptp movement as it can yield high accelerations. It accepts the pose in which the arm should be after the next cycle (one cycle has a duration between 1 and 20 ms)

Message type:

```
geometry_msgs/Pose
```

Sample call:

```
The following is not recommend to use outside of a program providing proper trajectories, as it can yield high accelerations when used wrongly  
TODO
```

### **cartesian\_control/ptp**

Movement in Cartesian space for point to point movement. The robot has to be in an appropriate control mode before using this topic (otherwise it will not move) (see settings/switch\_mode).

Message type:

```
std_msgs/Float64MultiArray
```

Sample call:

```
TODO
```

### **cartesian\_control/set\_impedance**

Sets cartesian impedance values (stiffness, damping, cpmaxdelta, maxforce, axismaxdeltatrq)

Message type:

```
iis_orocos/CartesianImpedance
```

Sample call:

```
rostopic pub /real/right_arm/cartesian_control/set_impedance  
iis_orocos/CartesianImpedance "stiffness:
```

```
linear: {x: 1000.0, y: 1000.0, z: 1000.0}  
angular: {x: 100.0, y: 100.0, z: 100.0}  
damping:  
  linear: {x: 0.3, y: 0.3, z: 0.3}  
  angular: {x: 0.3, y: 0.3, z: 0.3}  
cpmaxdelta: 0.0  
maxforce: 0.0  
axismaxdeltatrq: 0.0"
```

## cartesian\_control/set\_velocity\_limit

Sets maximum velocity limit for trajectory movements in cartesian space (cartesian\_control/move). It expects the maximum allowed absolute Cartesian moving distance within one cycle.

Message type:

```
std_msgs/Float32
```

Sample call:

```
rostopic pub /real/right_arm/cartesian_control/set_velocity_limit  
std_msgs/Float32 0.0
```

From:

<https://iis.uibk.ac.at/> - IIS

Permanent link:

<https://iis.uibk.ac.at/intranet/projects/robot/armtopics?rev=1402487111>

Last update: **2018/09/03 14:57**

